


TEST PROCEDURE:


1. Dip one test strip into a water sample for **2 SECONDS** *without motion*.
2. Remove and shake once, briskly, to remove excess water.
3. **WAIT 25 SECONDS**, then match **pH**, **Total Alkalinity**, and **Total Hardness** in this order. Match colors for **Nitrite** and **Nitrate** at **1 MINUTE**.



Nitrate (NO₃) (end pad - ppm) - Read Fifth




Nitrite (NO₂) (ppm) - Read Fourth

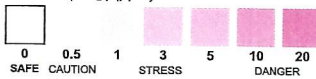


Total Hardness (ppm) - Read Third



Total Alkalinity (ppm) - Read Second

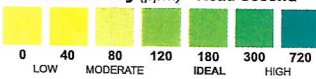

pH (pad nearest handle) - Read First

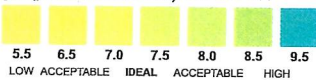

©2017 Industrial Test Systems, Inc. Rock Hill SC USA R1017AGA-SECO
ECO-CHEK® is a registered trademark of Industrial Test Systems, Inc. Rock Hill, SC USA